

Instructions for Tilt EXT Plasma/LCD Bracket


REF: 12973-6-7

- 1) Fit cable ties Item (A) to chassis, then fix to wall using screws (make sure wall area is suitable and flat)
- 2) Assemble brackets with item (B, C & D) leaving the top nut and bolts slightly loose.



Note: If the back of the TV screen is not flat or has formed recesses, use Nylon spacers Item (F) to enable the bracket to stand off the back panel of the screen. If used, do not over tighten!

- 3) Fix the bracket to the screen using the manufactures bolts or one of the three types of studs, washers & nuts supplied. Items (E) note studs only have to be finger tight.
- 4) Finally hook screen onto chassis making sure hooks locate into slot then adjust tilt and tighten bolts.

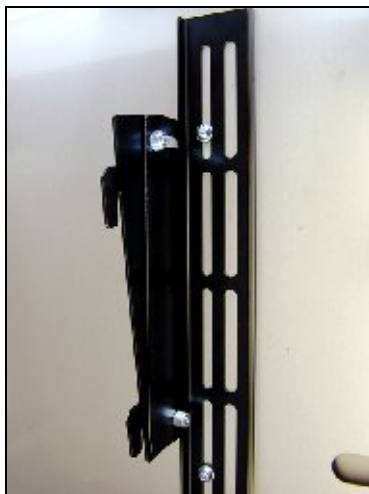

Any queries please contact our technical department: (01438) 747202.

Fixings




Item A.



Item B.



Item C.

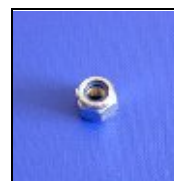

Item D.



Item E.



Item F.